

These warning lamps may be accompanied by a message and/or a sound signal



## Engine oil pressure

It comes on for a few seconds each time you switch on the ignition.

If this warning lamp comes on, engine running, it tells you that the oil pressure is low.

**It is essential to stop the vehicle.**

Contact a CITROËN dealer.



## Coolant temperature warning lamp

It comes on for a few seconds each time you switch on the ignition.

If this warning lamp comes on, engine running, it tells you that the coolant temperature is rising abnormally.

**It is essential to stop the vehicle.**

Check the coolant level.

See "Levels".

If the level is satisfactory, consult a CITROËN dealer.



## Battery charge

This warning lamp should go out when the engine is running.

If it remains permanently on, contact a CITROËN dealer.



## Warning lamp for parking brake, brake fluid level and braking distribution malfunction

With the engine running, the lighting of this warning lamp indicates that the parking brake is on or not properly released, that the brake fluid level is low or that the braking system is malfunctioning.

If the warning lamp remains on even after you have released the parking brake, stop immediately and contact a CITROËN dealer.



## Driver's seat belt not fastened

This lamp comes on if the LH seat belt is not fastened when the ignition is switched on and while the vehicle is moving at up to approx. 20 km/h (12 mph). Above this speed, the warning lamp flashes, accompanied by a sound signal for around 120 seconds. Then it remains on.



## SERVICE

This warning lamp remains on for a serious fault. Consult a CITROËN dealer as soon as possible.

This warning lamp remains on only for a short time for faults that are minor. Contact a CITROËN dealer if necessary.

To find out the nature of the corresponding warning, consult the Log of Alerts (See section "Displays A and C" in "Multifunction display").



## Fuel low

It comes on for a few seconds each time you switch on the ignition.

If the fuel low warning lamp comes on, there remain approx. 4 to 6 litres of fuel in the tank.



## Depollution system

It remains on until you start the engine.

If this warning lamp flashes or lights up while you are driving, this indicates a problem with the depollution system.

Consult a CITROËN dealer as soon as possible.

# WARNING LAMPS

II



## ABS system

The **ABS** warning lamp lights up when you switch on the ignition: it should go out after a few seconds.

If it does not go out, there could be a system malfunction.

See "Brakes".



## Left hand direction indicator

See "Signalling".



## Right hand direction indicator

See "Signalling".

**If the hazard lamps are activated, this means that the direction indicators flash on both sides at the same time.**



## Airbag fault

See "Airbags".

It is tested briefly on starting.



## Sidelamps

See "Signalling".



## Main beams

See "Signalling".



## Front passenger's airbag deactivation

See "Airbags".

It is tested briefly on starting.



## Dipped beams

See "Signalling".



## Foglamps (rear)

See "Signalling".



## Diesel engine preheating

See method for starting the engine.

See "Driving".