


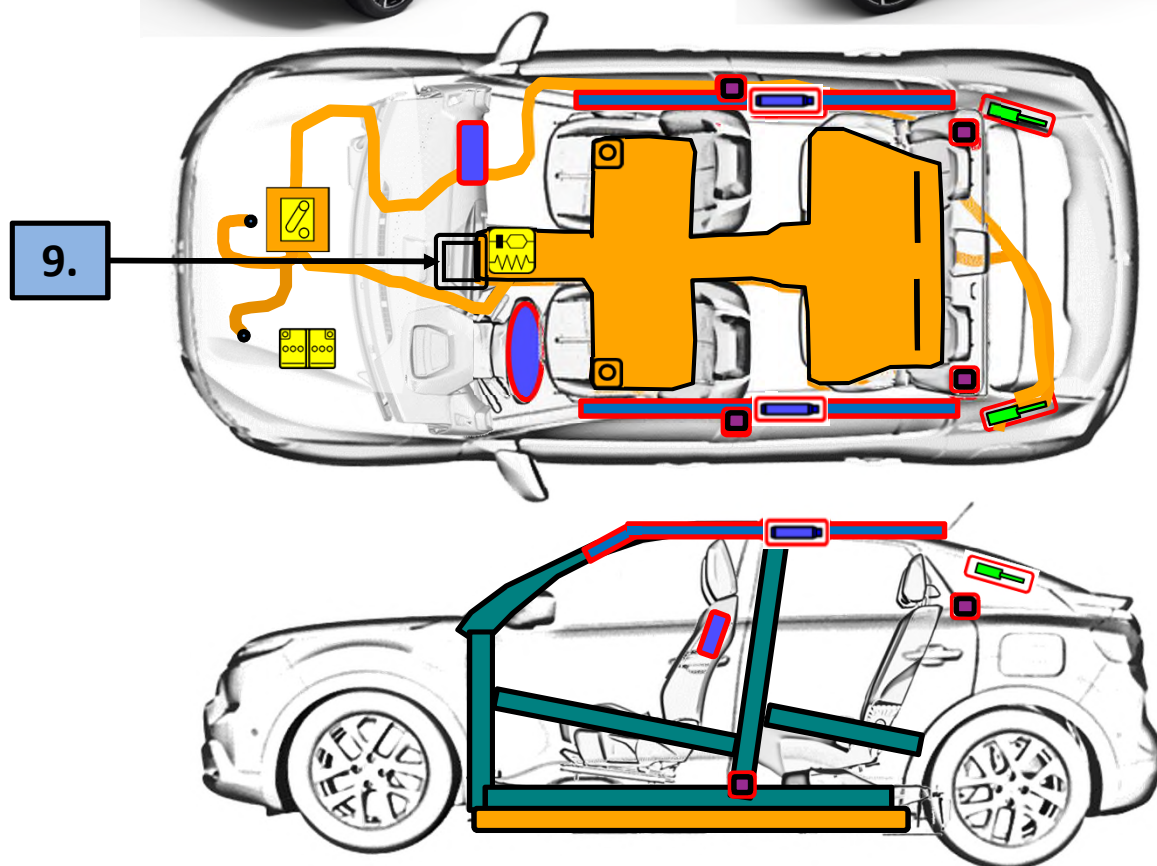

	airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		gas strut and triggered pre-loaded spring / pre-loaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra-capacitor, low-voltage		Fuel tank		Gas tank		Safety valve
	Battery pack, high-voltage		High voltage power cable		High voltage device that disconnects high voltage		Fuse box disabling high voltage		High voltage ultra-capacitor
			Low voltage device that disconnects high voltage						



1. Identification/recognition





The lack of engine noise does not mean that the vehicle is switched off. The vehicle can move without making a noise and can restart instantly provided it has not been fully switched off.




2. Immobilisation/stabilisation/lifting

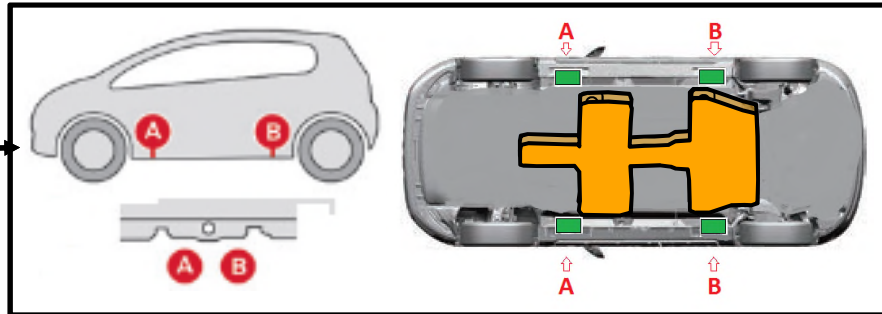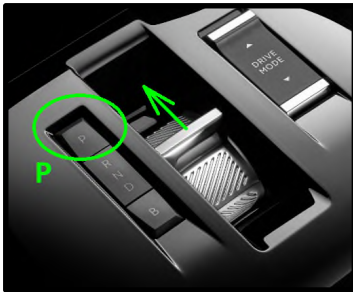


 
3. Disable direct hazards / safety regulations

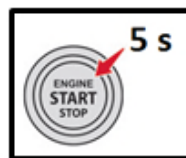


1

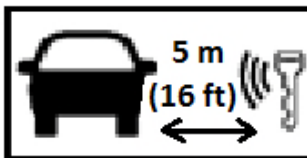

2

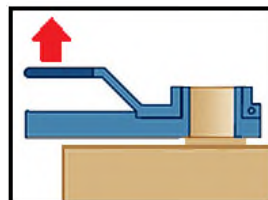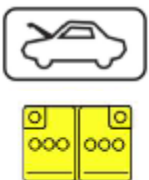


3

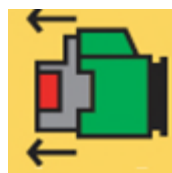

4



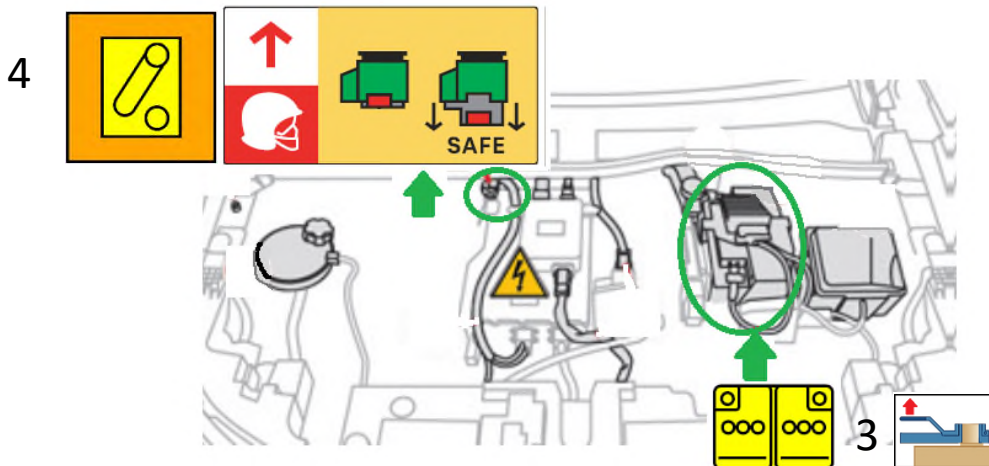

4. Access to the occupants

Toughened glass



5. Stored energy/liquids/gases/solids



400 V Li-ion



12 V



 If coolant escapes from the battery cooling system, there is a risk of a thermal reaction in the high-voltage battery. Monitor the temperature of the high-voltage battery!



6. In case of fire





 Lithium-ion batteries may self-ignite or reignite once the fire has been extinguished. Monitor the temperature of the high-voltage battery!





7. In case of submersion

Remove the vehicle from the water then refer to section 3, Disable direct hazards / safety regulations

8. Towing /transport/storage

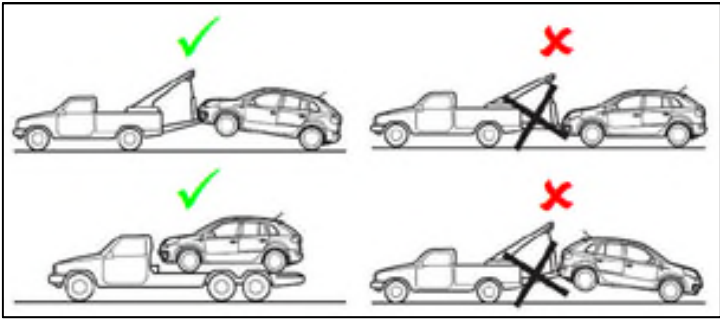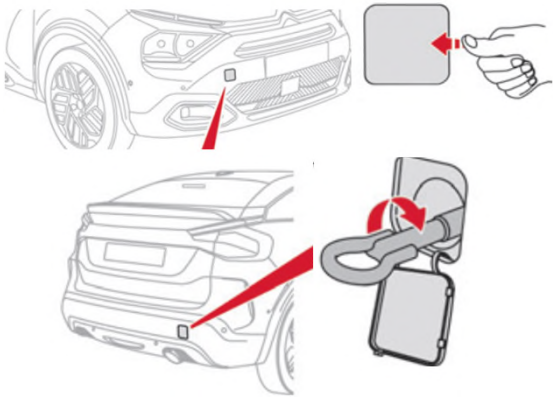

9. Important additional information

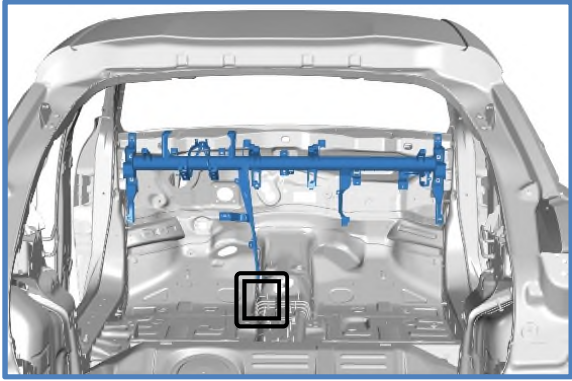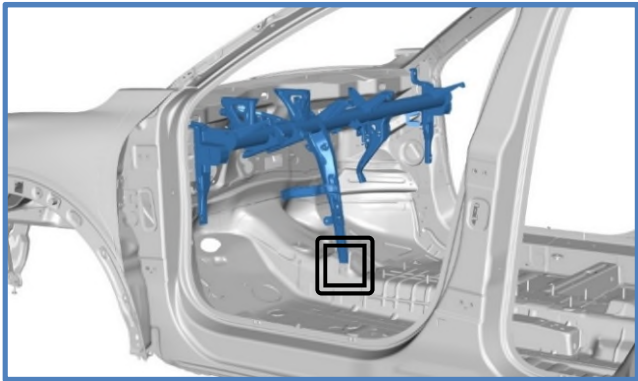

10. Explanation of pictograms used



Deactivate the hands-free key



Bonnet



Use water to spread the fire



Warning: electricity



Explosive



Corrosive



Dangerous to human health