
MANUAL CHILD LOCK

Mechanical system to prevent opening of the rear door using its interior control.

The control is located on the edge of each rear door.

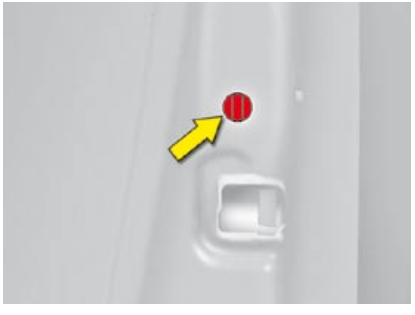

Locking


☞ Turn the red control one quarter of a turn to the left using the ignition key.

Unlocking

☞ Turn the red control one quarter of a turn to the right using the ignition key.

ELECTRIC CHILD LOCK*

Remote control system to prevent opening of the rear doors using their interior controls and use of the rear electric windows.

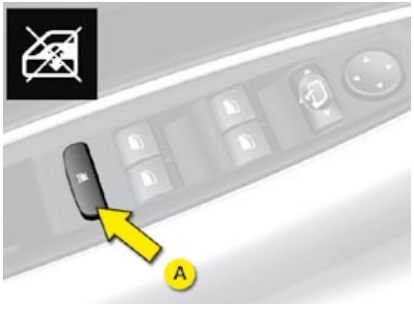

The control A is located on the driver's door, with the electric window controls.

Activation

☞ Press the button **A**.



This warning lamp comes on temporarily on the instrument panel when the child lock is activated.

It also comes on when the ignition is switched on, then switches off approximately ten seconds after the engine is started.

Deactivation

☞ Press the button **A** again.

This system is independent and in no circumstances does it take the place of the central locking control.

Check the status of the child lock each time you switch on the ignition.

Always remove the key from the ignition when leaving the vehicle, even for a short time.

In the event of a serious impact, the electric child lock is deactivated automatically to permit the exit of the rear passengers.

* Depending on version.